

Fix the thermometer so that it is out of direct heat and sunlight.


Use free standing or hang using the key hole slot provided.

When the temperature rises, the red pointer will be pushed across the scale towards the right to register the maximum temperature.

When the temperature falls, the blue pointer will be pushed across the scale to the left to register the minimum temperature.

BLACK NEEDLE
Shows present temperature

RED NEEDLE
Records highest (maximum) temperature

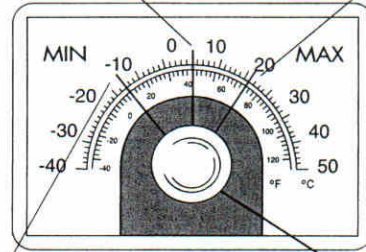

BLUE NEEDLE
Records lowest (minimum) temperature

RE-SET KNOB
Turn anti-clockwise and clockwise to re-set.

RE-SET OPERATION: Carefully turn re-set knob clockwise until Blue (Min. Temp.) needle just touches the Black Needle. Turn re-set knob anti-clockwise until Red (Max.Temp.) needle just touches the Black needle. Forcing either Blue or Red needles too hard against the Black needle may cause damage.