

EarthWay[®] EV-N-SPRED

G42180
G42700
88242
G46950
G45800
45550
G45551

BROADCAST SPREADER SETTING MATRIX

Start by ensuring that your spreader calibration is correct. Make sure the holes in the bottom of the hopper are fully open when the Rate Control handle is on #30. If not, please adjust control cable or rod to allow for a full open hopper holes with the handle at position at #30.

 


Look for *EarthWay* or *Ev-N-Spred* models on the fertilizer for settings. If there is none listed, please use the comparison chart below as a guide to estimate your spreader setting. These settings are approximate and intended as a guide only.

Variations in physical characteristics of material applied, walking speed and surface roughness may require slightly different spreader settings. Due to the above conditions, the manufacturer makes no warranty as to the uniformity of coverage actually obtained from settings listed.



BAG WEIGHT	SQ/FT COVERAGE		
	5,000 LBS/1000	10,000 LBS/1000	15,000 LBS/1000
5 LBS.	1.0	0.5	0.3
10 LBS.	2.0	1.0	0.7
15 LBS.	3.0	1.5	1.0
18 LBS.	3.6	1.8	1.2
20 LBS.	4.0	2.0	1.3
25 LBS.	5.0	2.5	1.7
30 LBS.	6.0	3.0	2.0
35 LBS.	7.0	3.5	2.3
40 LBS.	8.0	4.0	2.7
45 LBS.	9.0	4.5	3.0
50 LBS.	10.0	5.0	3.3

Example Bag Weight Chart
to calculate the number of
lbs. per 1,000 square feet.

FERTILIZER

PARTICLE SIZES: LBS. PER 1,000 SQUARE FEET.	Fine/Small (SAND)	 SPREAD WIDTH	Medium (HALF BB)	 SPREAD WIDTH	Large (BB)	 SPREAD WIDTH
	SETTING		SETTING		SETTING	
1 LB.	11	5-7'	11	7-9'	12	9-12'
2 LBS.	13	5-7'	13	7-9'	13	9-12'
3 LBS.	14	5-7'	14	7-9'	14	9-12'
4 LBS.	16	5-7'	16	7-9'	15	9-12'
5 LBS.	17	5-7'	17	7-9'	17	9-12'
6 LBS.	18	5-7'	18	7-9'	18	9-12'
7 LBS.	19	5-7'	19	7-9'	19	9-12'
8 LBS.	20	5-7'	20	7-9'	20	9-12'
9 LBS.	22	5-7'	21	7-9'	22	9-12'
10 LBS.	23	5-7'	22	7-9'	24	9-12'

GRASS SEED

	 FINE	 COARSE
	SETTING	SETTING
2 LBS.	17	18
3 LBS.	19	20
4 LBS.	21	22
5 LBS.	23	24