


Tool Cabinet

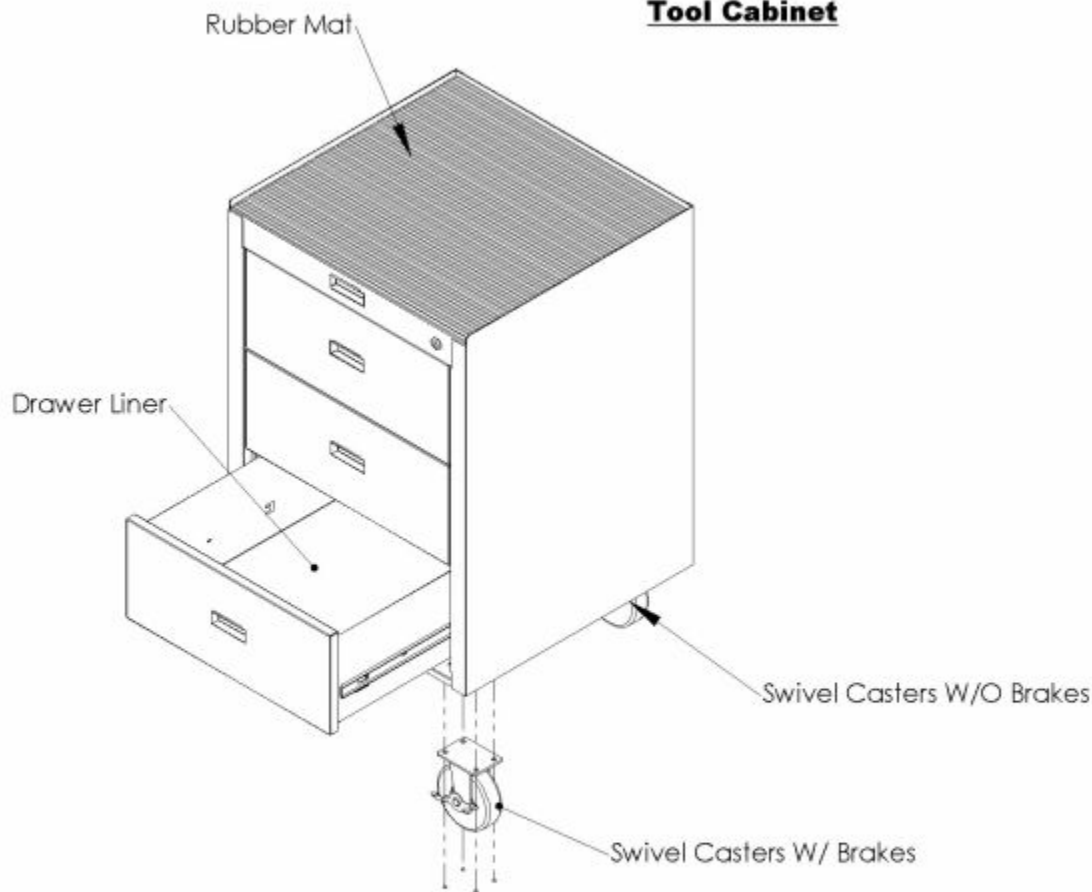

Congratulations! On the purchase of your Pro-Maxx Tool Cabinet. Some assembly is required

Installing Casters

Assemble (2) swivel casters with brakes to the front and (2) swivels casters without brakes to the rear, using (16) 1/4-20 x 1/2 machine screws.

Drawer Locking

All drawers need to be closed in order for the cabinet to lock.

Safety Warnings

Do not stand on this product.
Do not alter this product in any manner.
Do not overload this product.
An improperly loaded tool cabinet can become unstable or tip over, causing serious injury.
To prevent accidents, follow the instructions below:

Loading:

1. Load bottom drawer first to increase stability.
2. Distribute contents and weight evenly among remaining drawers.
3. Check to see if cabinet is stable after loading is complete.

Unloading:

1. Remove contents from top drawer first.
2. Remove contents from bottom drawer last.

Parts List

- (16) 1/4-20 machine screws.
- (2) Swivel Casters W/ Brakes.
- (2) Swivel Casters W/O Brakes.
- (3) Drawer liners.
- (1) Rubber Mat.



The inovative Source for Storage & Workplace Furniture

Edsal Manufacturing Company, Inc. 4400 South Packers Avenue, Chicago IL 60609 (773) 254-0600

#2051270
4/29/03